


更新韌體版本方式：

更新韌體前置作業

1. 煩請先下載韌體版本，並若下載檔案為解壓縮檔(如附檔名為 zip/rar)，煩請先解壓縮檔案。
2. 確定網路線已從您電腦的網路埠連接到 NBG-4615 的 LAN 埠 (1 至 4 埠，任選一埠)
3. 更新韌體時請勿使用電腦的無線連到 NBG4615

步驟一：開啟您的網頁瀏覽器(Internet Explorer)→請在網址輸入
“http://192.168.1.1” →按下 Enter 會出現步驟二的圖 1 畫面

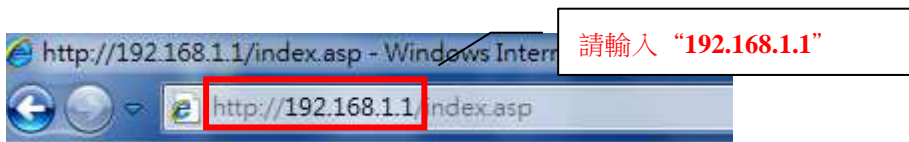

步驟二：請先選擇**繁體中文**並輸入預設登入密碼”1234”，請直接按下”**登入**
(Login)” →進入步驟三的畫面



步驟三：請登入〔專家模式〕




步驟四：請點選維護→請點選〔韌體升級〕



步驟五：請點選維護→請點選〔韌體升級〕

請注意！更新韌體過程中，請不要關閉設備電源，及請勿拔除電腦的網路線，並請等待 3~5 分鐘後，設備會自動重開後，並重新回到登入畫面，即完成更新。

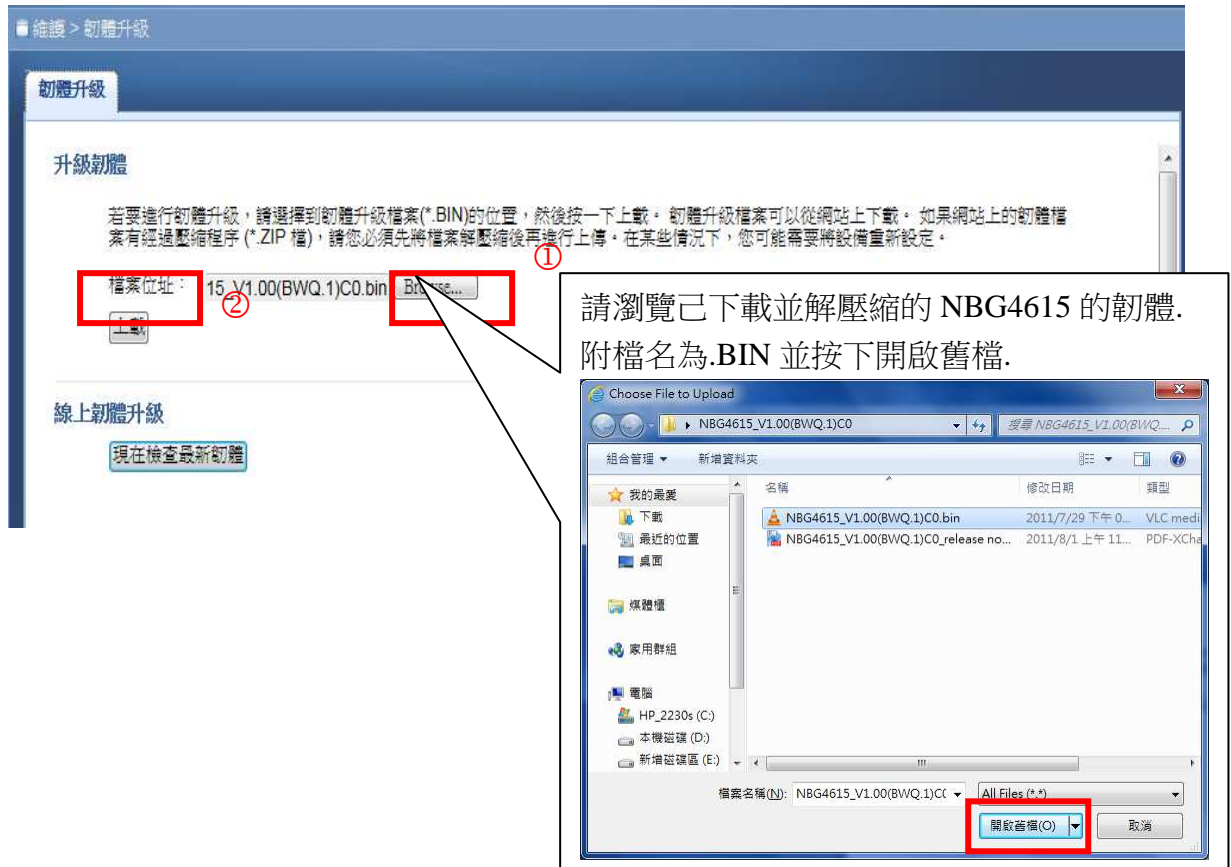

The screenshot shows the 'Firmware Upgrade' (韌體升級) section of a device's management interface. It includes instructions on how to upload a firmware file. A callout box points to the 'Browse...' button next to the file path '15_V1.00(BWQ.1)C0.bin', with a circled '1' next to it. Another callout points to the file name, with a circled '2' next to it. A separate callout box contains the text: '請瀏覽已下載並解壓縮的 NBG4615 的韌體。附檔名為.BIN 並按下開啟舊檔。' (Please browse the downloaded and decompressed NBG4615 firmware. The file name is .BIN and click Open. An inset window titled 'Choose File to Upload' shows a file explorer view of the folder 'NBG4615_V1.00(BWQ.1)C0'. It lists two files: 'NBG4615_V1.00(BWQ.1)C0.bin' and 'NBG4615_V1.00(BWQ.1)C0_release no...'. The 'Open' button (開啟舊檔(O)) is highlighted with a red box.



The screenshot shows a status page with a large circular refresh icon (a 'G' with a circular arrow) on the left. To the right of the icon, the text reads: '裝置現正重新啟動。請稍後...' (The device is currently restarting. Please wait...). Below this, a smaller line of text says: '裝置現在要重新開機。由於並無指示何時程序將完成，請稍待一分鐘，後再嘗試存取路由器。' (The device is now restarting. Since there is no indication of when the process will be complete, please wait for one minute and then try to access the router again.)

步驟六：請重新登入到 NBG4615，如步驟二～步驟三，並檢查設備的韌體版本是否變更成上傳後的版本。

The screenshot displays the ZyXEL NBG4615 web management interface. The browser address bar shows the URL <http://192.168.1.1/local/advance/dashboard.asp>. The page title is "ZyXEL NBG4615". The interface is in Chinese and shows the "狀態" (Status) page. Two tables are visible:

項目	資料
主機名稱:	NBG4615
韌體版本:	V1.00(BWQ.1)
系統作業模式:	路由器模式

項目	資料
系統已執行時間:	1 min, 0 secs
目前日期時間:	1970-01-01 / 00:01:05
系統資源:	
- CPU 使用量:	0%
- 記憶體使用量:	27%

Below these tables, there are sections for "區域網路資訊" (LAN Information) and "IPv6 Status". The LAN information table shows:

項目	資料
- MAC 位址:	50:67:F0:11:D8:58
- IP 位址:	192.168.1.1
- IP 子網路遮罩:	255.255.255.0
- DHCP:	伺服器

The IPv6 Status section shows:

項目	資料
IPv6 Connection Type:	Link-local only

Red boxes highlight the "韌體版本" (Firmware Version) field in both tables, with a callout box pointing to the value "V1.00(BWQ.1)".

~End of Document~